 


CASA Remote Control

REMOTE CONTROL NOTES



LISTEN AND YOU'LL SEE

REMOTE CONTROL

TO PRESERVE BATTERY LIFE THE BATTERIES ARE PACKED SEPARATELY FROM THE REMOTE CONTROL AND NEED TO BE INSERTED BEFORE THE REMOTE CONTROL WILL OPERATE.

Remove the two screws from the base of the remote control and remove the cover.


Slide out the battery carrier with the two wires attached.

Insert the batteries (two AAA types) with the correct (+) and (-) polarity as shown in the carrier (figure1)

Slide the battery carrier back into the remote control taking care not to pinch the wires.

Refit the cover and the two screws.

Figure1

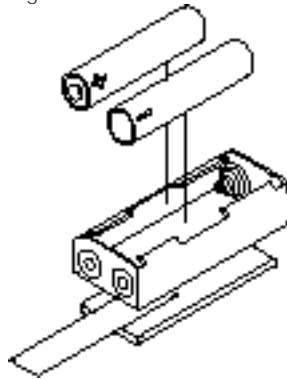

B&W Loudspeakers Ltd. reserves the right to amend details of the specification without notice in line with technical developments. Copyright © B&W Loudspeakers Ltd. Printed in England. B&W Loudspeakers Ltd, Meadow Road, Worthing, BN11 2RX, England Tel: +44 (0) 1903 524801 Fax: +44 (0) 1903 524725 B&W Loudspeakers of America, 54 Concord Street, North Reading, MA 01864-2699, USA Tel: (1978) 664 2870 Fax: (1978) 664 4109 <http://www.bwspeakers.com>



LISTEN AND YOU'LL SEE